

TEAC

MCDV72iP

DVD Micro Hi-Fi System with Docking for iPod/iPhone/iPad



USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Customer Support Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Owner's Name

Owner's Address

Postcode

Model Name/No.

Serial No.

Dealer's Name

Dealer's Address

Postcode

Authorised Service Centres in Major Australian Cities

NSW

151 Arthur Street
Homebush West, NSW 2140

Queensland

Unit 1, 320 Curtin Ave West
Eagle Farm, QLD 4009

Western Australia

Unit 2, 50 Pilbara Street
Welshpool, WA 6106

South Australia

11 McInnes Street
Ridleyton, SA 5008

Victoria

282 Normanby Road
South Melbourne, VIC 3205

Thank you for selecting a TEAC product.

If you should require assistance with your product regarding its setup or operation, or if any difficulties arise, please call us directly for advice between Monday to Friday at 8.30AM – 6PM AEST at the

TEAC Customer Support Hotline

1300 553 315

teacservicesupport@awa.com.au

www.teac.com.au

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty Terms & Conditions

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to TEAC products purchased, used and serviced in Australia.
2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.
3. Refund or replacement via your retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.
4. Subject to the terms herein, this warranty effectively covers the equipment as specified in the Warranty Periods Table below from the date of purchase.

| TEAC PRODUCT | WARRANTY PERIOD |
|----------------------------------|--|
| LED/LCD TV 32" (80 cm) and above | 1 Year (In-Home Service/ Pick up Available)* |
| All other TEAC products | 1 Year (Carry-in Service) |

5. In Home Service/Pick up* Service

This service will only be provided as part of this warranty if all the following conditions are met;

- a) The product is indicated in the Warranty Period Table.
- b) The product is within the warranty period.
- c) The product is located within the normal service area of the local TEAC Authorised Service Centre.



If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

Carry-in Service

Where In-Home service/Pick up* is not available, the purchaser is required to send the product to the nearest TEAC Authorised Service Centre for repair. In this event, proof of purchase is required to support a warranty claim. After the repair, the product will be available for collection by or return to the purchaser at a fee upon request. TEAC in-home service can be made available at a fee upon request.

6. A 12-month replacement warranty is applicable to all Accessories such as Remote, Power Adaptors and Cables.
7. TEAC will ensure to the best of its abilities that all required parts are made available for any required service/repair.
8. TEAC Australia Pty Ltd and its Authorised Service Centres will use their best endeavours to complete product repairs within a reasonable period based on available resources and workload during the time when service is requested and performed.
9. Refurbished parts may be used to repair the product. In the case of a replacement, the product may be replaced, with a refurbished unit of the same type or, if one is unavailable, a similar refurbished model with equal or better features & specifications.
10. Please be advised that if the product presented for repair is capable of retaining user-generated data, the data may be lost during servicing. Customers are strongly encouraged to back up all important information/data before sending the product in for service/repair.
11. Service will be provided only during normal business hours and under safety conditions and circumstances. TEAC and its authorised service agents can refuse any repair if safety, in relation to OH&S, becomes a concern to its staff or authorised service agents' personnel.
12. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
 - a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
 - b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
 - c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product.
13. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
14. TEAC reserves the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.
15. LCD dead pixel policy, please contact TEAC Customer Support Hotline on 1300 553 315 for assistance.

**Important safety instructions – please read carefully
and keep for future reference**

| | |
|---|---|
|  | To reduce the risk of fire or electric shock, do not expose this product to water, rain or moisture. To prevent the risk of electric shock, do not remove the cover or back of this product. In case of product failure, only qualified personnel can repair. There are no user-serviceable parts inside. |
|  | Use of controls, adjustments, or performance of procedures other than those specified herein may result in dangerous radiation exposure. This product is rated as LASER CLASS 1 PRODUCT. CAUTION: Laser radiation when open - never stare into the laser beam. |

CAUTION!

Dangerous voltage may be present inside the product! To reduce the risk of electric shock, do not open or remove the cover or back. No user-serviceable parts inside. Only qualified service personnel can repair and maintain this product.

If the electric cord is damaged, it must be replaced by the manufacturer or qualified after-sales personnel in order to avoid any danger.

The product must be installed in accordance with local laws.

Damaged batteries must be properly disposed. In order to protect the environment, please dispose the batteries properly, in accordance with local laws (information is available at your reseller).

Where to install the product

- Place the product on a straight, solid and stable place. Do not place the product on a carpet.
- Do not place the product on top of another that may cause overheating (for example, a receiver or amplifier).
- Do not place anything underneath the product (for example, CDs or magazines).

Proper ventilation

- Place the product in a sufficiently ventilated place to avoid overheating. Allow at least 10cm of space at the back and top of the product, and 5cm of space on both side to prevent overheating.
- Do not place items such as newspapers, tablecloth, curtains, in front of the ventilating openings.

Do not expose the product to high temperatures, moisture, water and dust.

- The product should not be exposed to dripping or splashing. No object filled with liquids, such as vases, should be placed on the product.
- Do not place other items that may damage the product close to it (for example, water containers and lighted candles).
- No naked flame sources, such as lighted candles, should be placed on the product.

Electric supply

- Please unplug the product in the case of prolonged non-use.
- If the supply cable is damaged, it must be replaced by the manufacturer or qualified after-sales personnel to avoid any danger.
- This product must be connected to an electrical supply 240V ~ 50Hz.
- The plug must be accessible after installation.

CAUTION

Never turn the unit off or disconnect a USB Storage Device (Flash Drive) when it is being accessed. Doing so could damage the MCDV72iP and the connected USB storage device.

- Do not use a device that has a maximum current consumption of 100 mA or more.
- Do not use a device that has security functions or other special functions.
- Do not use a device that is divided into two or more partitions.
- A USB hub cannot be used to connect USB device to this unit.

USB storage devices that can be played on this unit

- Only USB Storage device (Flash Memory) maximum 16GB can be used. Do NOT use a high-capacity USB hard disc with this unit.
- Some flash memory players that charge from USB terminal cannot be used for playback.
- Hard disk drives, CD/DVD Drives, and other devices connected via USB cannot be used.
- This unit cannot copy or move files.
- Playable formats: FAT12, FAT16, FAT32
- Depending on the conditions of a USB flash drive, this unit might not be able to play the files on it or skipping might occur.
- NTFS, HFS and HFS+ formats are not supported and cannot be used.
- Max. number of playable folders: 200
- Max. number of playable files: 999
If the USB storage device contains more than 999 files or 200 folders, this unit cannot play it back correctly.
- This unit cannot playback files that are larger than 2GB.
- Variable bit rate files might not playback correctly.
- File information display
- The display of this unit can only show single-byte letters and numbers.
If the file information contains Japanese, Chinese or other double-byte characters, playback is possible but the name will not be shown correctly.

TABLE OF CONTENTS

| | |
|---|-----|
| INTRODUCTION..... | 4 |
| - Function Overview..... | 4 |
| - Location of Controls..... | 5-6 |
| - Install the Remote Control Battery..... | 7 |
| - System Connection..... | 7 |
| BASIC OPERATION..... | 8 |
| - Operation with iPod/iPhone/iPad | 7 |
| - Operation with Remote Control..... | 7 |
| - FM Radio Operation..... | 11 |
| REFERENCE..... | 12 |
| - Troubleshooting..... | 12 |
| - Specifications..... | 13 |

INTRODUCTION






Thank you for choosing this TEAC product. Here are the main characteristics of your new microsystem:

- It is equipped with Ipod docking ,enabling you to enjoy the music and video from your ipod /ipod touch/ iphone/ipad
- Equipped with a digital PLL tuner, enabling you to easily search and memorise FM radio channels,
- With its elegant and compact design, this Hi-Fi system can easily find its place at home and be installed in just a couple of minutes,
- With its USB input functions and CD Ripping, it is truly a multimedia player which can play and record all your favourite songs in both MP3 and WMA file formats,
- Finally, you can enjoy an uncompromised music experience with convenient and easy-to-use audio settings thanks to the EQ and bass-booster systems.

 
FUNCTION OVERVIEW

- Compatible with DVD, CD, CD-R(W) MP3, CD-R(W) WMA
- iPod dock, compatible with iPod, iPhone and iPad.
- VFD display
- Two matching speakers with total output power: 2 x 15W RMS
- Digital PLL FM Tuner
- USB and CD Ripping function


LIST OF MAIN PARTS

| | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| Master Unit | 2 Speakers | Remote Control | Manual | FM Loop Antenna |


LOCATION OF CONTROLS

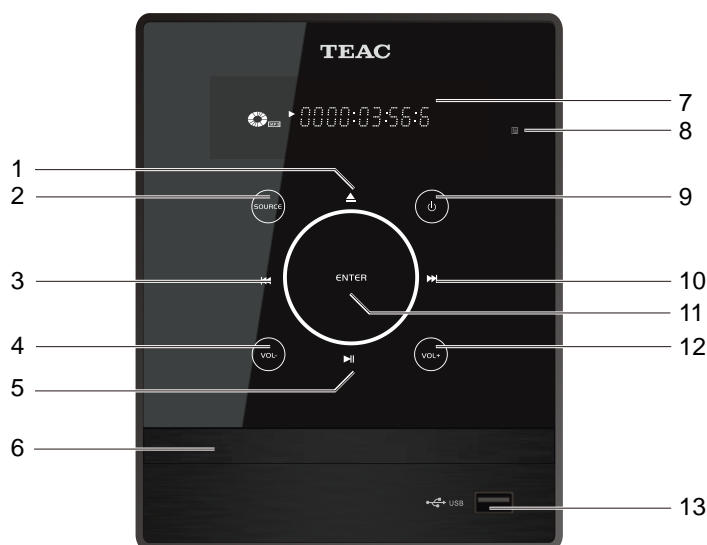

- | | |
|--------------|-------------------------|
| 1.OPEN/CLOSE | 7.DISPLAY |
| 2.SOURCE | 8.REMOTE CONTROL SENSOR |
| 3.PREV | 9.POWER |
| 4.VOL- | 10.NEXT |
| 5.PLAY/PAUSE | 11.ENTER |
| 6.DVD TRAY | 12.VOL+ |
| | 13.USB PORT |

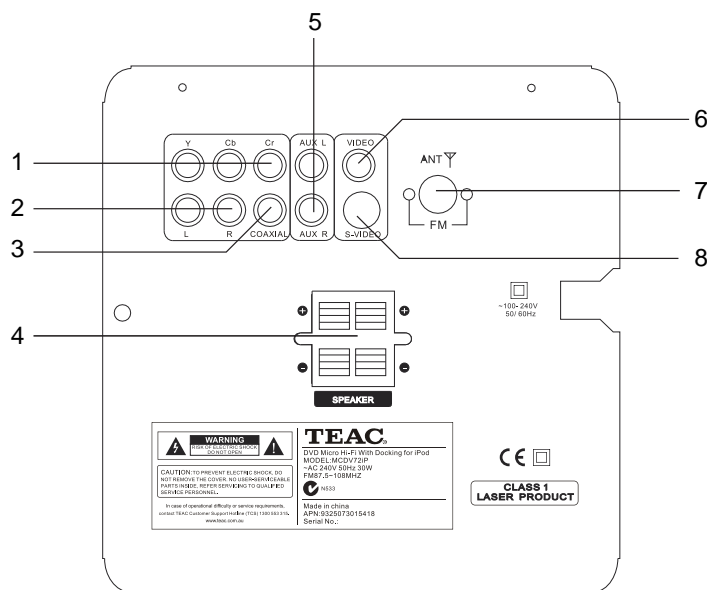 

- | | |
|-----------------------------------|-------------------|
| 1.Component(Y Cb Cr) Video Output | 5.AUX IN L/R |
| 2.L/R Stereo audio Output | 6.Composite Video |
| 3.Coaxial Output | 7.FM Antenna |
| 4.Speaker L/R | 8.S-video Output |

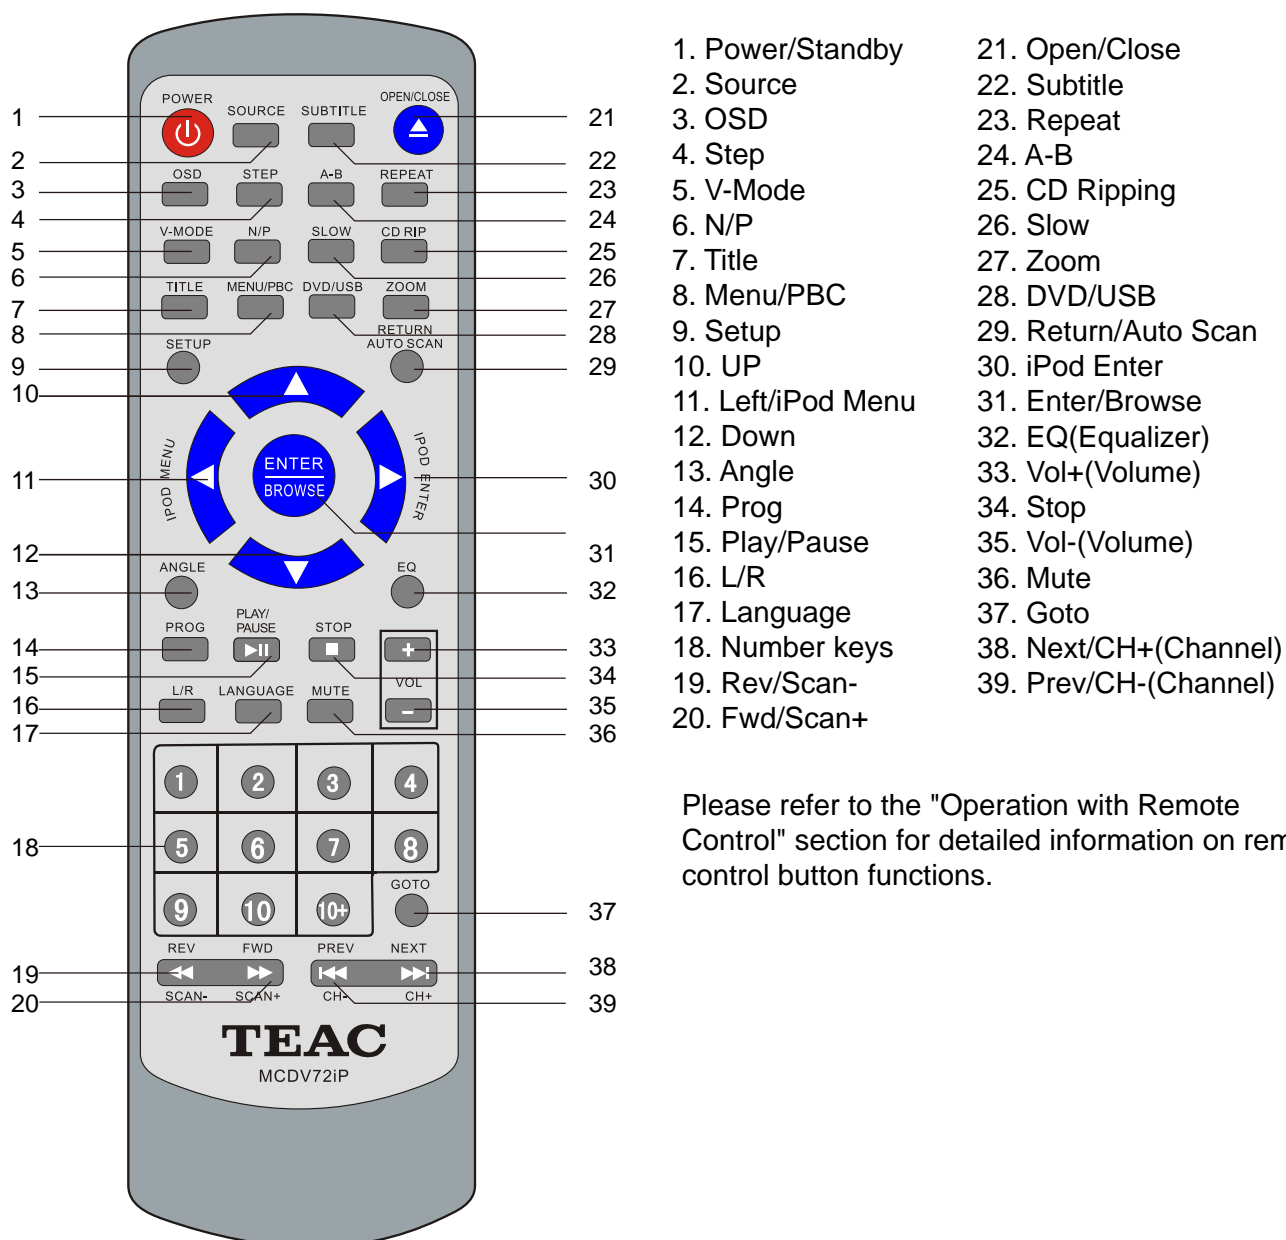 

Please refer to the "Operation with Remote Control" section for detailed information on remote control button functions.

INSTALL THE REMOTE CONTROL BATTERY

1. Remove the battery cover.
2. Insert 2 AAA batteries into the battery compartment (batteries not provided). Make sure the + / - symbols match.
3. Close the battery cover.

 
Note:

1. Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with cloth. If the chemicals touch your skin, wash immediately.
2. If the remote control is not going to be used for a long period of time, remove the batteries.
3. Dispose of used batteries by following your local hazardous waste regulations.

SYSTEM CONNECTION

The figure below shows the unit connection setup and all possible connections to external devices

WARNING: Ensure that the AC power is turned off when making or changing cable connections.
Note: When connecting this product's speaker wires to the main unit, note the white markings on the wires and make the connections consistent (ie. if a marked wire is connected to MR+, ensure that the other marked wire is connected to ML+.)

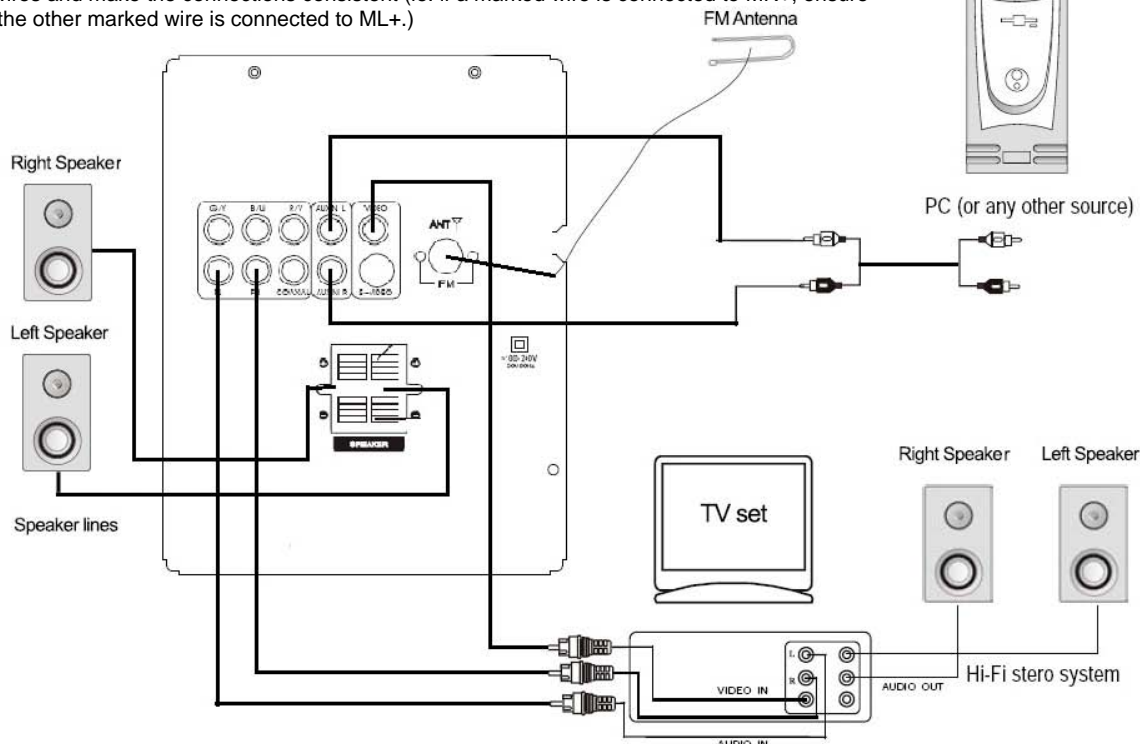


BASIC OPERATION

PREPARATION

- 1). Before turning on, check whether all the connections are correct and secure. After that, plug in the power connection.
- 2). Press the **POWER** button on the front panel to turn on.
- 3). To play a DVD, press the **OPEN/CLOSE** button on the front panel to open the disc tray. Put a DVD onto the disk tray and close the tray. The DVD will start playing automatically.
- 4). Some DVDs have built-on menu. The player will automatically show the menu after loading the DVD. During playback, press Menu or Title will return to main Menu. This is depending on the DVD content.
- 5). Some VCDs and SVCDs have PBC(Playback Control) Menu. The player. When playing a VCD disc, press PDC to show PBC menu. Up to 4X zoom is available for all video materials.

 Unit is compatible with the following iPod/iPhone/iPad models:

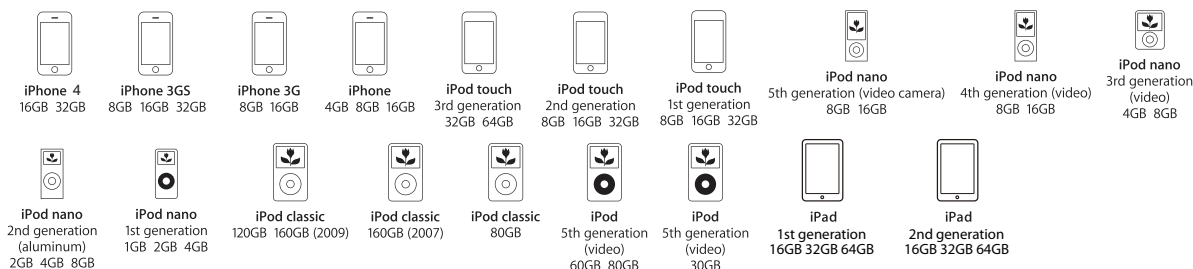

"iPhone, iPad and iPod touch are trademarks of Apple Inc., Registered in the U.S. And other countries.

"Made for iPod", "Made for iPhone" "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory the iPod, iPhone, or iPad may affect wireless performance."

OPERATION WITH IPOD/IPHONE/IPAD

1. Dock an iPod onto the unit's Dock Connector .
2. Press the Power button to turn the unit on .
3. Press the SOURCE button to switch to iPod mode .
4. Press ►❏ button to begin playing the docked iPod .
5. Press ◀❏ or ►❏ to skip between tracks on the docked iPod .
6. Press the IPOD MENU button (LEFT button) on the remote to scroll to the menu on a docked iPod .
7. Press the UP/DOWN buttons to move up and down to select the desired track.

NOTE:

- Video output from iPod/iPhone/iPad is possible by using a composite (CVBS) connection to a TV screen.

OPERATION WITH REMOTE CONTROL

1. POWER

Press the POWER button on the remote control (or front panel) to turn on or back to standby mode

2. SOURCE

Press to cycle through different input sources: DVD/IPOD/FM RADIO/AUX

3. OSD

When in DVD Mode, press this button to display information about the current track. Press repeatedly to cycle through different information display options or hide the display.

4. SCAN/SLOW

When in DVD Mode, press the STEP button to view the video frame by frame. Press STEP to advance each frame.

To advance in larger steps, press Fast Forward (>> button), then press STEP.

It is also possible to STEP backwards by starting Fast Rewind (<< button), then pressing STEP.

5. V-MODE

In DVD Mode, this button to switch the video between 1.S-Video 2.Component Video 3. Composite Video

6. N/P

To adjust DVD player output so that it matches your TV system. Press to select toggle between NTSC, AUTO or PAL System.

7. TITLE

In DVD Mode, press to stop playback and return to the title menu. Press direction key to select your desired title.

Note: This feature is dependant on the DVD content structure.

8. MENU/PBC

In DVD Mode, press to return to the previous menu for chapter selection.

9. SETUP

Press this button to enter the on-screen Setup Menu for setup options. Press again to exit the Setup Menu.

10. UP

Press this button to navigate upwards

11. IPOD MENU

While playing music/video in iPod Mode, press IPOD MENU (LEFT button) to view the iPod track list.

Note: This command may not work on all iPod/iPhone/iPad models.

12. DOWN

Press this button to navigate downwards

13. ANGLE

In DVD Mode, press to select your desired viewing angle when playing a multi-angle DVD disc. Press repeatedly to cycle through all available angles.

Note: This feature is dependant on the DVD content structure.

14. PAUSE

While playing in DVD/USB/iPod , press the PAUSE button on the remote control or front panel to pause playback.

15. PLAY

Press to start or resume program playback

16. L/R

 
During VCD/SVCD playback,press L/R repeatedly to select the channel of audio-output: Left/Right/Mix/Stereo.

17. LANGUAGE

In DVD Mode, press to cycle through any available language soundtracks on the DVD/SVCD.

Note: This feature depends on the availability of alternate language tracks on the disc.

When a DVD disc is being played back, you can cycle through the audio channels in the following modes :



For a VCD, the soundtrack options are as follows:



18. NUMBER BUTTONS

While in DVD/USB mode, press the NUMBER buttons on the remote control to select the songs you

For example:

Track 2: Press 2

Track 16: Press 10+ and 6

Track 22: Press 10+ two times, then 2

19.◀◀/SCAN - Fast rewind to the previous track/chapter

In DVD/USB/iPod mode, press this to fast rewind during playback.

Press PLAY to resume normal playback speed.

In Radio mode, press this to scan lower FM frequency stations.

20.▶▶/SCAN + Fast Forward to the next track/chapter

In DVD/USB/iPod mode, press this to fast forward during playback.

Press PLAY to resume normal playback speed.

In Radio mode, press this to scan higher FM frequency stations.

21. Open / Closes

Open and closes the disc tray in DVD Mode.

22. SUBTITLE

Press to cycle through any available subtitle languages when playing a multi-subtitle DVD or SVCD disc.

23. REPEAT

While playing in DVD/USB modes, press the REPEAT button to toggle between different repeat modes: repeat current track/repeat all tracks.

24. A-B

In DVD Mode, Use A-B to set up looping playback for a desired section of a track.

1. Press A-B to set the beginning of the desired section.

2. Press A-B a second time to set the ending of the section. Looping playback will start

3. Press A-B again to cancel the function and return to normal playback.

25. CD RIP

This function converts audio CD tracks to convert to MP3 file format.

After the CD has been loaded, press CD RIP on remote, a CD ripping menu will display.

Follow the options and set your requirements.

SPEED: Change ripping speed from Normal to Fast.

Bitrate: The encoding bitrate from 96,112,128kbps or above. Higher bitrate, better sound quality, require larger file size.

Track selection: Select individual track to convert to MP3 file

26. SLOW

In DVD Mode, press to playback in slow motion.

Press repeatedly to cycle through different slow speeds.

Press PLAY to return to normal playback.

27. ZOOM

In DVD Mode, press to zoom in on the picture.

Press again for different zoom rates.

While zoomed into a picture, press the direction buttons to move around.

28. PLAYING FROM USB

Press the DVD/USB button to switch between DVD/USB playback.

1. Insert a USB drive into the USB port on the front panel.

2. Press the DVD/USB to switch to USB playback. After the unit finishes reading the device, it will start to play.

Note: Depending on the capacity of the device, reading may take more than 1 minute.

Special note:

- This unit does not support NTFS file system, make sure that the storage devices is FAT or FAT32 file system.
- Large storage devices may take longer than normal time to read.
- This unit will not read directly from mobile phone or camera memory.
- USB supported size Max 16GB

29. AUTO SCAN

While in Radio mode, press the AUTO SCAN button to automatically search and save FM channels.

NOTE: This function will erase any previously saved channels.

30. IPOD MENU

In iPod Mode, press to enter iPod track list menu

31. ENTER/BROWSE

Press to enter and select menu options

32. EQUALIZER

Press the EQ button repeatedly to choose from five preset sound field effects: Standard, Jazz, Rock, Pops, Classic.

Note: Some disc content is unsuitable for this EQ format and may cause sound distortion while selecting.

33/35. VOLUME ADJUSTMENT

Press PLAY again, playback will resume from the beginning knob on the front panel.

34. STOP

In DVD/USB/iPod mode, press the STOP button on the remote control to stop playback.

When the PLAY/PAUSE button is pressed again, playback will restart from the beginning.

36. MUTE

During playback, press the MUTE button to silence the audio completely. Press the button again to revert to the original volume.

37. GOTO

In DVD Mode, press to go to to your desired position directly via this function.

38.39 ◀◀/CH- ▶▶/CH+

When in DVD Mode, press the ◀◀ button to fast forward and ▶▶ button to fast rewind. Press repeatedly for different speeds up to 20x. To return to normal playback, press the PLAY button.

When in Radio Mode, press the CH+/- button to go to the next/previous saved station

FM RADIO OPERATION

1. To select FM radio mode, press the SOURCE button on the remote control or front panel to enter radio mode. Press this button to switch between radio, iPod, DVD.

2. Tuning to FM Stations

- 1). Press AUTOSCAN button to automatically search FM frequency from lower to higher stations and save them in sequence. Press again to stop searching.
- 2). Press and hold SCAN +/- button for more than a second. The tuner will scan automatically and stop when it finds a radio station.
- 3). Press CH+/- repeatedly to select desired preset stations

Note:

- When you perform AUTOSCAN function will clear all stored stations and new stations are stored.
- To improve reception, reposition the FM antenna to receive best radio signal

TROUBLE SHOOTING

Please use the following methods to solve the following problems while using this unit.

| Problem | Cause | Solution |
|----------------------------------|---|--|
| Unit has no power | Power plug is not fully inserted into the socket | Insert the power plug into the socket securely |
| The remote control does not work | Battery is flat | Replace with a new battery |
| | The front end of the remote control is not aimed at the infra-red sensor part of the player | Please aim at the remote control at infra-red sensor window |
| CD will not play | The disc door is not closed properly | Close the disc door |
| | No audio CD inserted | Place an audio CD in the disc compartment |
| | Inverse placement of disc | Be sure that the side with pictures of the disc points upwards |
| No sound from loudspeaker | Audio cable not connected or not connected securely | Connect the cable as the diagram |
| | The volume is in the lowest status | Turn the volume up |
| Distorted or intermittent sound | Disc not clean | Use a piece of clean soft cloth to clean the disc |
| | Disc scratched | Replace the disc with a new one |
| | Disc distorted | |
| Unit cannot be operated | Embedded micro computer fails due to lightning, static or other interference | Power OFF, and restart the player after 10 seconds |

SPECIFICATION

Power supply ~240VAC 50 Hz
Power consumption 30W(MAX)
Operating temperature -10~40
Frequency response..... 20Hz-20kHz (± 3 dB)
Distortion $\leq 0.7\%$
Supported format CD, CD-R/RW, DVD-R/RW, DVD+R/RW
USB supported size up to 16GB
Multi Media supported file and format FLAC, MP3, WMA, AVI, JPEG, XVID
Frequency range..... FM 87.5 - 108MHZ
Supported system file FAT, FAT32
Dimensions 153(W) x 200(H) x 235(D) mm
Weight (net) 1.70 Kg

Speaker
Impedance 8Ω
Input power 15W
Dimensions 145(W) x 200(H) x 195(D) mm
Weight (net) 1.8Kg +1.8Kg

Amplifier
Output Power
(Stereo, EIAJ, 1kHz, 8Ohms) 1.5W + 1.5W
(Stereo, 1 % THD, 1kHz, 8Ohms)..... 13.5 W +13.5 W

Total harmonic distortion..... 0.7% (at 4W, 1 kHz, 8Ohms)

Remote
Distance..... 6m
Angle..... 30°

Accessories
Speaker cable..... 2
Remote control 1
Instruction manual 1

* Features and specifications are subject to change without notice.

* Weight and dimensions are approximate.

* All trademarks and registered trademarks are the property of their respective owners. All rights reserved.



TEAC CUSTOMER SUPPORT HOTLINE(TCS)

Free call: 1300 553 315

Between Monday to Friday – AEST 8.30AM to 6PM